

the quest

- Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.
- This valve controls the water flow of the HK8 jets.
- Use the Tri-Zone control to select the jet zones.

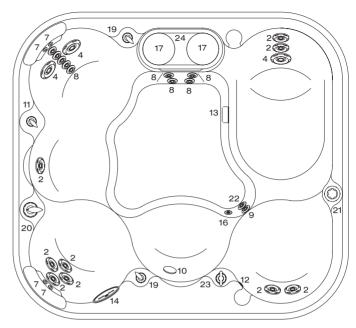

#	Component Identification	Qty.	
2 4 7 8 9 10 11 12 13 14 16 17 19 20 21 22 23 24	Suction Fitting Bather's Control Panel Floor Drain Filter Canisters Neck Jet Valves Tri-Zone Control Spa Frog® Spa Frog® Return Fitting	9 3 4 9 1 1 1 1 1 2 2 1 1 1 1	
	Physical Specifications	Size	
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	77" x 84" 34" 32.5" 6 600 3436 340 25	

quest tri-zone control

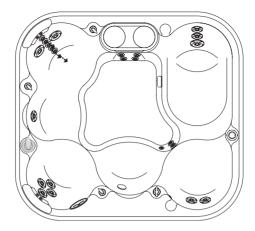


ZONE 1 Upper- and mid- and lower-body jets.*



ZONE 2Upper- and mid-body jets.*



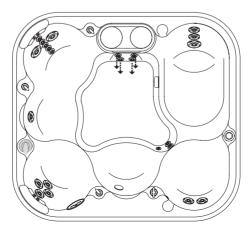


ZONE 3 Lowerbody jets.*



*HK8 jets operate in every zone.

the destiny

- Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.
- This valve controls the water flow of the HK8 jets.
- Use the Tri-Zone control to select the jet zones.

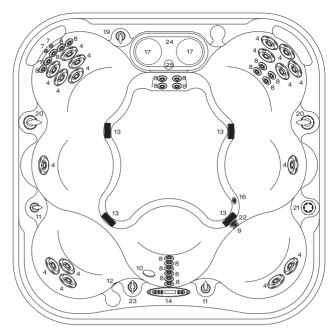


#	Component Identification	Qty.
_	Ozone Injector Fitting Light Air Controls IR Sensor Suction Fittings Bather's Control Panel Floor Drain Filter Canisters Neck Jet Valve Tri-Zone Controls Spa Frog®	17 2 19 1 1 2 1 4 1 1 2 1 1 1 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	84" x 84" 35.5" 34" 7 800 3885 370 38

destiny tri-zone control

ZONE 1 (pump 2) Upper-body jets.*



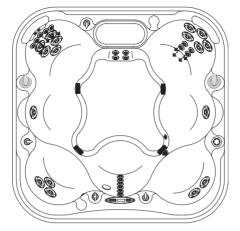

ZONE 4 (pump 1) Upper- and mid-body jets.*



ZONE 2 (pump 2) Upper-, mid-, and lowerbody jets.*




ZONE 5 (pump 1) Upper-, mid-, and lowerbody jets.*



ZONE 3 (pump 2) Lower-body jets.*



*HK8 neck jets operate in every zone. PAGE 21

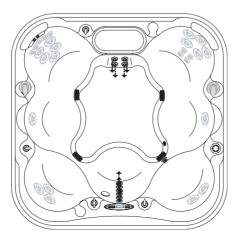


ZONE 6 (pump 1) Lower-body jets.*



the reward

- Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.
- This valve controls the water flow of the HK8 jets.
- Use the Tri-Zone control to select the jet zones.

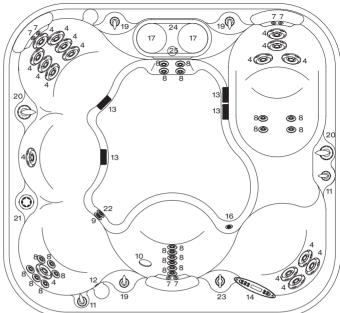

_		
#	Component Identification	Qty.
4 7 8 9 10 11 12 13 14 16 17 19 20 21 22 23 24 25	Bather's Control Panel Floor Drain Filter Canisters Neck Jet Valves Tri-Zone Controls Spa Frog® Spa Frog® Return Fitting	17 6 20 1 1 2 1 4 1 1 2 3 2 1 1 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	84" x 90" 35.5" 34" 6 825 4161 400 43

reward tri-zone control

ZONE 1 (pump 2) Upper-body jets.*



ZONE 4 (pump 1) Upper-body jets.*



ZONE 2 (pump 1) Upper-, mid-, and lower-body jets.*




ZONE 5 (pump 2) Upper-, mid-, and lower-body jets.*



ZONE 3 (pump 1) Lowerbody jets.*



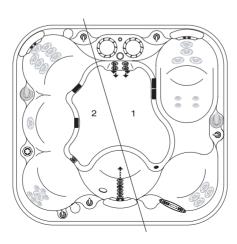


ZONE 6 (pump 2) Lowerbody jets.*



HK jets operate in every zone.

the epic

- Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.
- This valve controls the water flow of the HK8 neck jets.
- Use the Tri-Zone control to select the jet zones.

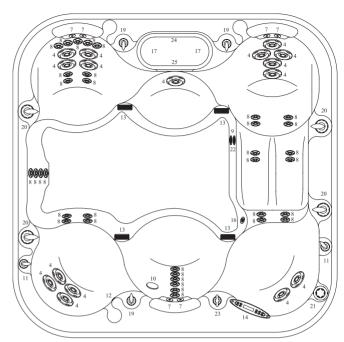

#	Component Identification	Qty.	
4	HK™16 Jets	16	
7	HK™8 Jets	6	
8	HK™40 Jets	35	
9	Ozone Injector Fitting	1	
10	Light	1	
11	Air Controls	2	
12	IR Sensor	1	
13	Suction Fittings	4	
14	Bather's Control Panel	1	
16	Floor Drain	1	
17	Filter Canisters	2	
19	Neck Jet Valves	3	
20	Tri-Zone Controls	4	
21	Spa Frog®	1	
22	, 0	1	
23		1	
24	Waterfall Feature	1	
25	Waterfall Light	1	
	Physical Specifications	Size	
	Dimensions	90" x 90"	

35.5"

34"

850

450

57

4603

7

Height

Interior Depth

Seating Positions

Weight Dry/Lbs.


Weight Full/Lbs.

Total Therapy Jets

Water Capacity/Gallons


epic tri-zone control

A (PUMP 2) Tri-Zone A in position 1: Therapy Pillar*

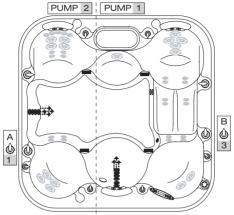


B (PUMP 1) Tri-Zone B in position 3: Full-back*

A (PUMP 2) Tri-Zone A in position 2: Overall-back*

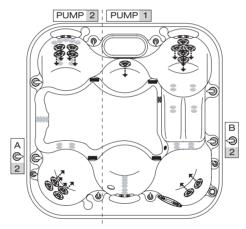

B (PUMP 1)
Tri-Zone B in
position 2:
Overall-back*

A+C (PUMP 2) Tri-Zone A in position 3 and Tri-Zone C in position 1: Feet*

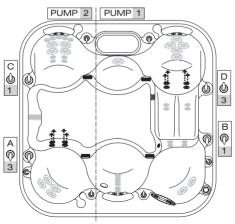

B+D (PUMP 1) Tri-Zone B in position 1 and Tri-Zone D in position 3: Thighs*


*HK8 neck jets operate in every zone

PAGE 25

epic tri-zone control

A+C (PUMP 2)

Tri-Zone A in position 3 and Tri-Zone C in position 2: Lower-back*

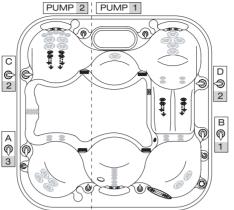


B+D (PUMP 1)

Tri-Zone B in position 1 and Tri-Zone D in position 2: Calves*

A+C (PUMP 2)

Tri-Zone A in position 3 and Tri-Zone C in position 3: Shoulders*

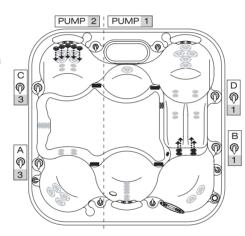

B+D (PUMP 1)

Tri-Zone B in position 1 and Tri-Zone D in position 1: Feet*

*HK8 neck jets operate in every zone