

Owner's Manual



Rev 1.1.14

4150 East Paris Ave. Kentwood, MI 49512 www.emeraldspa.com 800.766.7727

TABLE OF CONTENTS

INTRODUCTION				
IMPORTANT SAFETY INSTRUCTIONS 4 • General 4 • Electrical 5				
SPA LOCATION 6 • Outdoor Considerations 6 • Indoor Considerations 6 • Indoor or Outdoor Considerations 6				
INSTALLATION INSTRUCTIONS 7 • General Procedures 7 • 240V Systems 7-8 • GFCI Load Center Wiring 9				
FEATURES 10 • In-Spa Features 10 -12				
STARTING AND USING YOUR SPA 13 • Filling Your Spa 13				
SPA WATER CARE 13 • Filter Cartridge Removal / Replacement 13 • Chemical Safety Tips 14 • Spa Frog In-Line System 14 -15 • Ozone Generator 16 • Draining the Water 16				
MAINTAINING YOUR SPA17• Cleaning the Spa Shell17• Relamping the Underwater Light17• Winterizing Your Spa17• The Spa Cabinet17				
SPA CONTROLS18• Spa Side Control for Chateau18 -19• Spa Side Control for Estate20 -22• Spa Side Control for Manor23 -25• Spa Side Control Troubleshooting / Error Codes26				
TROUBLESHOOTING				
SPA WARRANTY INFORMATION				

INTRODUCTION

Congratulations on your purchase of the finest spa on the market today. Emerald Spa Corporation welcomes you to the Emerald Spa life-style! We are confident that this purchase will fulfill all your comfort, therapy, and relaxation needs.

With proper care, your spa will provide many years of comfort and pleasure. Please take the time to read all of the instructions before you install your Emerald Spa. This Owner's Manual will help you understand all the features of your spa and ensure that you get the most from your investment.

Remember, your beautiful new spa is a powerful appliance! You owe it to yourself, your family, and your friends, to make sure that the spa is installed correctly and safely.

This manual explains safety precautions, installation instructions, operating directions, and maintenance procedures. If you have questions after reading this manual, please call Emerald Spa at 1.800.766.7727.

Read and understand all safety, installation, operating instructions, and all warnings and cautions before adding water or attaching electrical power.

Emerald Spa Purchase Information	
Spa Model:	
Power Pack Model:	
Serial #:	
Date of Purchase:	

IMPORTANT SAFETY INSTRUCTIONS

When installing and using the electrical equipment, basic safety precautions should always be followed, including the following:

General

1. READ AND FOLLOW ALL INSTRUCTIONS

- 2. DANGER Risk of Accidental Drowning. Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use this spa unless they are supervised at all times.
- 3. DANGER Risk of Injury. The suction fittings in this spa are sized to match the specific water flow created by the pump. Should the need arise to replace the suction fittings or the pump, be sure that the flow rates are compatible. Never operate the spa if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the original fitting.
- 4. DANGER Risk of Electric Shock. Install at least 5 feet (1.52 m) from all metal surfaces. As an alternative, a spa may be installed within 5 feet of metal surfaces if each metal surface is permanently connected by a minimum No. 8 AWG (8.4 mm2) solid copper conductor to the wire connector on the terminal box that is provided for this purpose.
- 5. DANGER Risk of Electric Shock. Do not permit any electric appliance, such as a light, telephone, radio, or television, within 5 feet (1.52 m) of a spa.
- 6. WARNING To reduce the risk of injury, the water in the spa should never exceed 104 °F (40 °C). Water temperatures between 100 °F (38 °C) and 104 °F (40 °C) are considered safe for a healthy adult for a 10-to-15 minute time period. Lower water temperatures are recommend for extended use (exceeding 10-15 minutes) and for younger adults/children.
- 7. WARNING To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.
- 8. A wire connector is provided on this unit to connect a minimum No. 8 AWG (8.4mm2) solid copper conductor between this unit and any metal equipment, metal enclosures of electrical equipment, metal water pipe, or conduit within 5 feet (1.52 m) of the unit.
- 9. Excessive water temperatures have a high potential for causing fetal damage during pregnancy. Pregnant women should limit spa water temperatures to 100 °F (38 °C) and only use the spa under the direction of a licensed physician.
- 10. The use of alcohol, drugs, or medication before or during spa use may lead to unconsciousness with the possibility of drowning.
- 11. Persons taking medication should consult a licensed physician before entering the spa.
- 12. Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a licensed physician before entering the spa.
- 13. CAUSES, SYMPTOMS AND EFFECTS OF HYPERTHERMIA Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6° F. The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsiness, and fainting. The effects of hyperthermia include (1) failure to perceive heat, (2) failure to recognize the need to exit spa, (3) unawareness of impending hazard, (4) fetal damage in pregnant women, (5) physical inability to exit the spa, (6) unconsciousness resulting in the danger of drowning.
- 14. The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia.
- 15. During winter months where the temperature is consistently below freezing, check your spa periodically to ensure that it is operating correctly and that the power to the spa has not been interrupted as to protect the water lines from freezing.
- 16. Do not use your spa alone.
- 17. People with infectious diseases should not use the spa.
- 18. To avoid injury, use care when entering or exiting the spa.
- 19. Do not use the spa immediately following strenuous exercise.
- 20. Maintain proper water chemistry in accordance to manufacturers' instruction.

IMPORTANT SAFETY INSTRUCTIONS

Electrical

- 1. Read & follow all safety instructions.
- 2. A green colored terminal or a terminal marked G, GR, Ground, Grounding, or the international symbol is located inside the supply terminal box or compartment. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electric supply panel with a continuous copper wire equivalent in size to the circuit conductors supplying this equipment.
- 3. The equipment must be provided with a ground fault circuit interrupter located in the disconnect switch, as installed by a licensed electrician.
- 4. The electrical service panel should be equipped with a 50-amp switch.
- 5. The electrical supply for the spa must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors, to comply with section 422-30 of the National Electrical Code, ANSI/NFPA 70-2002. The disconnecting means must be readily accessible to the spa occupant, but must not be within 5 feet (1.52 m) of the spa.
- 6. All field-installed metal components such as rails, ladders, drains or other similar hardware within 3 meters of the spa shall be bonded to the equipment grounding bus with copper wire conductors not smaller than No. 6 AWG.
- 7. For units intended for use other than single family dwellings, a clearly labeled emergency switch shall be provided as part of the installation. The switch shall be readily accessible to the occupants and shall be installed at least 5 feet (1.52 m) away, adjacent to, and within sight of, the unit.
- 8. WARNING: Improper electrical connections or conductor sizing may cause the equipment module to operate improperly, create the potential for an electrical hazard, and may void the warranty.
- 9. CAUTION: Use only approved pressure-type wire splicing lugs or connectors suitable for the size and type of wiring used.

If your spa is equipped with audio components, the following instructions also apply:

- 1. CAUTION Risk of Electric Shock. Do not leave component access panel open.
- 2. CAUTION Risk of Electric Shock. Replace components only with identical components.
- 3. CAUTION Do not operate the audio components while inside the spa.
- 4. WARNING Prevent Electrocution. Do not connect any auxiliary components (for example cable, additional speakers, headphones, additional audio/video components, etc.) to the system.
- 5. These units are not provided with an outdoor antennae; when provided, it should be installed in accordance with Article 810 of the National Electrical Code, ANSI/NFPA 70.
- 6. Do not service this product yourself as opening or removing covers may expose you to dangerous voltage or other risk of injury. Refer all servicing to qualified service personnel.
- 7. If the power supply connections or power supply cord(s) are damaged; if water is entering the audio equipment compartment area; if the protective shields or barriers are showing signs of deterioration; or if there are signs of other potential damage to the unit, turn off the unit at the disconnect switch and refer servicing to qualified service personnel.
- 8. This unit should be subjected to periodic routine maintenance (for example, once every 3 months) to make sure that the unit is operating properly.
- 9. Replace damaged cord immediately.
- 10. Do not bury electrical cables or cords.

SPA LOCATION

Your spa has been conveniently designed for use in either an indoor or outdoor setting. While selecting an appropriate location for your spa, there are important things to consider.

Indoor Considerations

- Walls, ceiling, flooring, and/or hardwood must be able to withstand high humidity. Just like in your bathroom, an exhaust fan would be a good idea.
- Spa Chemicals in the air may corrode certain metals in your home.
- A self-draining floor is a great way to ease any worries about spilled water.
- Spas must be accessible at all times to permit servicing if needed. Cost associated with the removal of walls, pulling a spa out of an enclosed area, etc. are not the responsibility of the manufacturer. All costs associated with these types of items will be the sole responsibility of the homeowner.
- Remember that you'll need extra space to store the cover when it is removed. When using our handy cover-lift device, you should allow for an extra 16" of clearance behind the spa.
- The spa must be placed on a solid, flat, and level surface that does not move or shake.
- You should consult with a builder or engineer to determine if your floor will support the spa weight. Remember, you must allow for the spa, water, and people in your total weight calculations.
- Be sure your spa is secure from access by young children. We offer a locking spa cover, but we also suggest keeping the spa room locked and off limits to children.


Outdoor Considerations

- Place your spa on a solid, flat, and level surface. We recommend a 4" thick reinforced concrete pad as the best surface. Dirt, sand, concrete pavers, paver stones, etc. are <u>not</u> acceptable surfaces for your spa and these surfaces will void all warranty claims.
- Keep in mind natural elements such as wind, sun, falling leaves, etc. Also consider lighting, visibility from the house, and accessibility.
- We recommend that you locate your spa in a locked fenced-in area to prevent access to the spa by children.
- It is a good idea to have a contractor review your proposed site to see that there are no support problems. There are often local ordinances that need to be met for spa use.

Indoor or Outdoor Considerations

- When installing the spa, provide for adequate drainage to prevent water from entering the equipment module area.
- When installing the spa, enable access to the equipment compartment.
- Never locate light switches or other electrical components within reach from inside your spa. The equipment module must remain protected by the skirting of the spa.

Wherever you locate your spa, you will need to have access to water in order to fill it. Also, you will need to be able to drain your spa periodically. Since your spa water will likely have chemicals in it, you won't want to drain your spa on the lawn or into a garden. Be sure you can reach a garden hose from the spa to where you plan to drain the water. Never let water get on the equipment module that is located in the door opening of your spa.

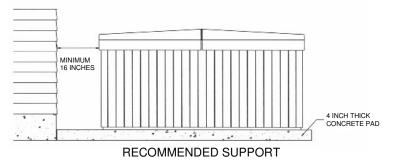


General Procedures

This section covers the installation of your spa. All electrical steps must be performed by a licensed electrician. The spa must be connected to a proper power supply and meet all National Electrical Code (N.E.C.) and local code requirements. The connection must include the conductors necessary for operation and bonding, as required by N.E.C.

- 1. Remove the spa from its shipping container and retain all safety, operation, and warranty information.
- 2. Position the spa on a flat, level surface such as concrete, or a wood deck which provides adequate drainage.
- 3. Position the spa at least 5 feet from all metal surfaces unless each metal surface is permanently connected to a bonding wire, as indicated in step 4.
- 4. The spa may be installed within 5 feet of metal surfaces as follows:
 - Installation must be in accordance with Article 680-(40-44) of the National Electrical Code, ANSI/NFPA 70-2002.
 - Each metal surface must be permanently connected to a bonding wire which is attached to a pressure wire connector provided for that purpose.
 - The pressure wire connector is located on the equipment system control enclosure.
 - The bonding wire must be at least No. 8 AWG (8.4 mm²) solid copper wire, in accordance with article 680-43E.
 - The bonding wire must be attached to the pressure wire connector and all metal equipment, metal enclosures of electrical equipment, metal water pipe, or conduit within 5 feet of the spa.

240V Systems

- 1. Install a 50-amp, switch in the electrical service panel.
- 2. The electrical supply for the spa must include a GFCI to shut off the power supply (to comply with section 422-30 of the National Electrical Code, ANSI/NFPA 70-2002). This disconnecting means must be readily accessible to the spa occupant, **however it must not be within 5 feet of the spa** (see diagram).

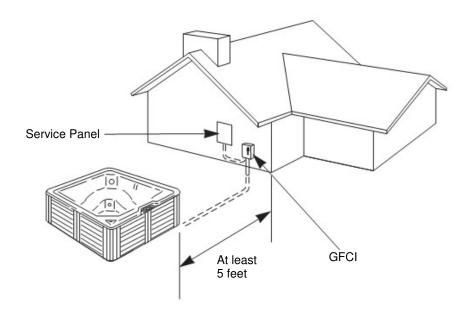


240V Systems [continued]

3. Pull four copper current carrying conductors (one each: black, red, white, green). Use either No. 6 AWG 60° C, No. 8 AWG 75° C, or No. 8 AWG 90° C wire, if spa is 50 feet or less away from its power supply.




NOTE: The ground must be equal to or larger than the largest power conductor.


- 4. Reposition the spa at its final location and route the flexible conduit.
- 5. Using a 1" conduit connector at the end of the flexible conduit, route wires through an entrance hole cut by your electrician into the control enclosure, and attach the conduit connector to the control enclosure.
- 6. Remove the front cover of the control enclosure by loosening the four screws that hold the cover in place. The locations of each of the four screws are circled in the illustration below.

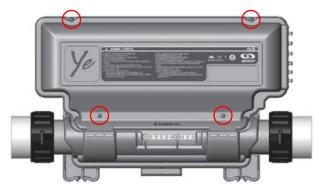

- 7. Attach power wires to the terminal block. Refer to the wiring diagram in the enclosure box lid for more information. Attach the wires as follows and shown in graphic below.
- 8. Complete the conductor connections at the power supply panel.
- 9. Do not turn power on until instructed to do so in the "Starting and Using Your Spa" section.

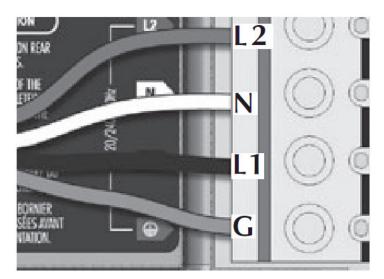

GFCI Load Center Wiring

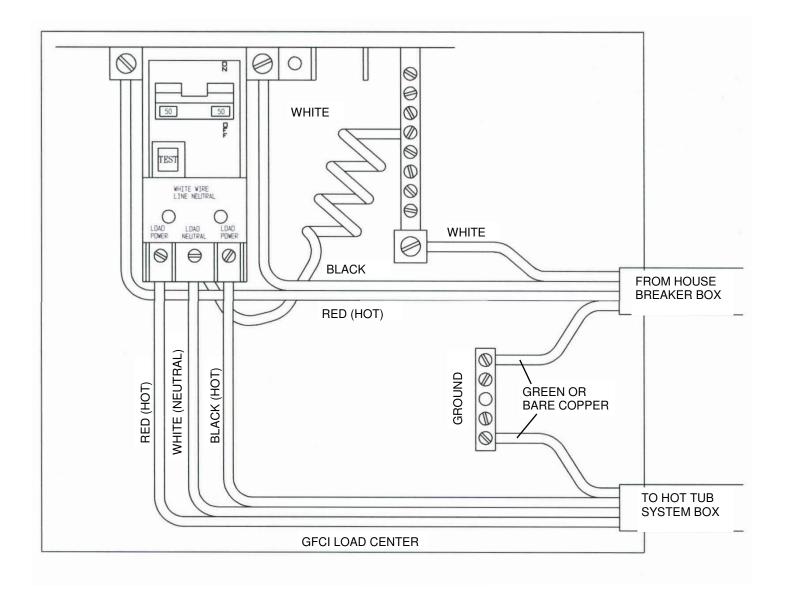

NOTE: The white neutral wire from the back of the GFCI MUST be connected to an incoming line neutral. The internal mechanism of the GFCI requires this neutral connection. The GFCI will not work without it.

Installation of this GFCI-Circuit Breaker, including ampere sizing and selection of conductor size and type, must be accomplished by a qualified electrician in accordance with the National Electrical Code, or the Canadian Electrical Code, and all federal, state and local codes and regulations in effect at the time of installation.

In-Spa Features

Your spa may be equipped with a variety of therapy jets, controls, and fixtures. Refer to the following charts and identify those features installed on your spa.

NOTE

NOTE: Take care not to turn the jet face beyond the natural stopping point. If this does occur it may prevent the jet from functioning properly.

Mini Jets (available in 1-1/2" size only)	A forceful, steady stream of water / air is delivered from these jets when the pump is on high or low speed.	0
Directional Jets (available in 2", 3" & 5" sizes)	Directional jets deliver therapy exactly where it's needed. The jet's nozzle can be positioned for pinpoint pressure on a sore muscle or specific area of the body.	MIN. MAX.
DoubleRoto Jets (available in 3" size only)	Our DoubleRoto jets provide two rotating streams of jetted massage therapy for ultimate comfort. Simply turn the outer ring of the jet to adjust the water flow.	MIN. MAX
Massage Jets (available in 3" size only)	The Massage jet has an unique water flow due to its multiple nozzles that give you a finger rolling massage. Turn the outer ring to moderate the water flowing through the jet.	міл.
RotoPulse Jets (available in 5" size only)	The RotoPulse jet delivers a high volume of water in a pulsating rolling massage to work the deep muscle tissue. Jet action is further enhanced when air is mixed into the stream of the water.	MIN.
Whirlpool Jets (available in 5" size only)	A standard feature on all Manor spas, the Whirlpool jet delivers a high degree of water through its large nozzle opening.	

In-Spa Features [continued]

MoodStream Jets	A standard feature on all Manor series spas, the Moodstream jets are located above the waterline. Turning the associated valve will allow you to control the intensity of the water stream. The gentle sound of cascading water enhances relaxation and your enjoyment of each spa experience.	
Individual Neck Jet Control	Installed on all Manor series spas (optional on Estate series) is a separate valve controlling the intensity of the water pressure for the neck jets. Pressure is controlled by turning the face of the jet and/or by the use of this control valve.	
Cup Holders	Located along the top edge of the spa are areas to set a cup or soda can. These cup holders are strictly for your convenience when you seek refreshments during use of your spa.	
Liquid Aromatherapy	Aromatherapy is used for the relief of pain, tension and fatigue, and to invigorate the entire body. Pressing the button on this feature will inject the water with a liquid fragrance. Simply unscrew the top cap to refill. Contact your spa dealer for a full selection of safe, liquid aromatic scents to add to your soaking enjoyment.	
LED Lighting Option	Optional LED lighting sets just the right mood. Choose your favorite color, or let multiple colors calmly illuminate the water.	
Air Control Valves	The air intake valves are located in various locations along the top coping of the spa. Turn to increase or decrease the amount of air mixed with the water flow. More air adds to the massage effect.	

In-Spa Features [continued]

Audio System Option The **Aquasound Audio System** incorporates state of the art Bluetooth technology allowing music to wirelessly stream from an audio source to the Aquasound receiver inside the spa cabinet. Bluetooth audio streaming will work with any Bluetooth enabled device such as iPods and smart phones.

Just pair your device with the Aquasound stereo to start playing your favorite music. Digital music files or internet radio from your phone will be sent wirelessly to the stereo.

Once paired, use the keypad installed along the top edge of the spa to control functions such as volume, play, pause and track changes.

Consult the manufacturer's instruction manual for important user instructions and proper operation of the Aquasound Audio system.

Telescoping Weir Skim Filter The weir skimmer is found on all Emerald Spa models. Its purpose is to skim the water surface. Always keep the water level at least 2" above the opening of the skimmer or damage to the system may result.

Suction Grate

The suction grate is the intake opening for the water circulating system. This grate protects you from the powerful suction created by the pump (s) that power your spa.




WARNING: Never block or remove the suction grate. Do not use spa if suction grate is removed!







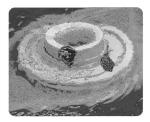



STARTING AND USING YOUR SPA

Filling Your Spa

Once the electric power has been connected, check the following while the power is OFF:

- 1. Be sure all fittings to the support system are tight. Hand tighten only!
- 2. Be sure the drain valve is closed.
- 3. Your spa is equipped with 2 or 4 push/pull valves. There is one located before the suction side of the pump and one located adjacent to the discharge side of your heater. If you have a secondary pump, there will be two valves for this pump as well. Pull the push/pull valves OUT so they are open.
- 4. Using a garden hose, fill with water to 2-4" above the skim filter. Always fill your spa with hard (not softened) water. Do not overfill. After the spa is filled, remove the garden hose.
- 5. Check the equipment module area for water leaks. If there is water dripping, it is probably a loose connection at the equipment module. You should re-check the tightness of the fittings and placement of the "O"-rings. If you cannot locate the source of the water leak, contact your authorized service dealer.
- 6. Check that the filter is positioned in the skim/filter system.
- 7. Activate the power to your spa. Refer to the Control Panel Instruction sheet included with this manual.

SPA WATER CARE

Your spa is equipped with what we believe is the finest filtering device available. We call it the Skim / Filter system, and it is one of the few skimmers available which actually skims the water surface. You'll notice a distinct whirlpool being drawn into the system, and floating debris of all sizes will literally "fall" into the unit and be trapped by the filter. It is important that you keep your filter clean, and it is suggested that you check the filter at least once per month and replace it when it becomes loaded with dirt or debris.

Filter Basket and Cartridge Removal and Replacement Procedure

- 1. Turn off electrical power to the spa.
- 2. Remove the floating weir and attached basket by rotating it counterclockwise to align the flat tabs on the filter housing flange with the flat areas on the floating weir and basket assembly, then lift out the assembly.
- 3. Lift the filter cartridge straight up and out of the filter housing, quickly moving it away from the tub to prevent collected debris from falling back into the water.
- Separate the floating weir from the basket by rotating it counterclockwise to align the notches on the floating weir flange with the tabs on the top of the basket, then simply pull them apart.
- 5. Clean any accumulated debris from the basket. Avoid hitting the basket against objects to knock debris loose, as this will break the basket.
- 6. Re-attach the basket to the floating weir.
- 7. Install a new filter cartridge in the filter housing.
- 8. Reinstall the floating weir and attached basket assembly.
- 9. Turn electrical power to your spa back on.





Chemical Safety Tips

- Never mix different types of chemicals or contaminate them in any way.
- Do not exceed recommended dosages.
- After superchlorinating/brominating, wait until the disinfectant level is down 3-5 parts per million (ppm) before using the spa.
- Keep chemicals out of reach of children and pets.
- Keep containers closed when not in use.
- Do not use contents of unlabeled containers.
- Never add water to chemicals. If called for by the instructions, add chemicals to water.
- Dispose of empty containers as instructed on the label.
- Never handle chemicals with your bare hands.
- Store chemicals in a cool, dry, clean place (not under spa).
- Remove cover when superchlorinating/brominating. Wait at least one hour (with circulating system or low-spa speed pump on) before replacing the cover. Doing so will prolong life of cover.

NOTE

NOTE: Check and maintain your water chemistry at least twice a week for proper levels.

Spa Frog In-Line System

NOTE

Your spa came with the most advanced, revolutionary sanitation system available today. When using the unique SPA FROG Mineral Cartridge with the exclusive SPA FROG Bromine Cartridge, you'll enjoy your spa more with less work and less bromine.

NOTE: If you purchased a 200-series spa, your spa came equipped with a floating

system rather than the in-line version. For the floating system instructions, please see

Less Work Because:

Minerals continuously work to control bacteria for up to four full months.

the instruction card included in your information packet.

- Cartridges last longer to eliminate daily maintenance.
- Cartridges are pre-filled for no measuring or mess.
- Simply adjust to your setting and relax for weeks.


Less Bromine Because:

- With minerals in the water, bromine use is cut by up to 50%. *
- Bromine last longer: 2-4 weeks on a 350 gallon spa with average use.
- With minerals and low levels of bromine, the water feels softer.
- The system reduces odors and leaves the water crystal clear.
- SPA FROG has the only minerals that work with bromine.

*Compared to the ANSI/NSPI recommended minimums for bromine in a spa.

The SPA FROG In-Line System is made up of:

- A. A Frog cap that is easily distinguishable among the fittings on the top of the spa;
- B. A Cartridge holder that pulls out the system;
- C. A Mineral Cartridge that controls bacteria in the water; and
- D. A Bromine Cartridge that helps support the minerals while oxidizing contaminants D. Bromine Cartridge like body oils. The cartridges are adjustable to meet your specific spa water care needs.

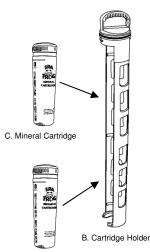



A Frog Can

Spa Frog In-Line System [continued]

Start Up


- Open cap of SPA FROG In-Line System and set aside. DO NOT OPEN CAP WHILE JETS ARE ON.
- Remove holder by pushing down and turning counterclockwise before pulling out.

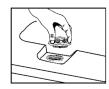

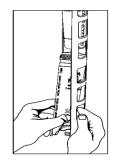

• Snap the Mineral Cartridge into the area marked "Minerals" (top portion) and the Bromine Cartridge into the area marked "Bromine" (bottom portion) making sure to line up the indentation at the top of the cartridges with the raised area on the holder.




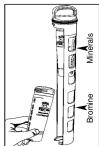


NOTE

NOTE: Using Bromine Cartridge in the area marked "Minerals" can cause over bromination which shortens cartridge life.

• Slowly insert holder into system. Line up holder arrow (1) with system arrow (2). Push down until holder tabs (3) go past system tabs (4) and turn holder to the right (clockwise) until it stops. To ensure a locked position, attempt to pull holder up. If it stays in place, the lock is secure.

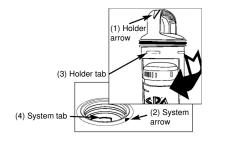

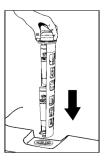



• Begin regular spa care procedures as soon as start-up is complete.

Adjusting and Replacing Mineral Cartridge:

Open Mineral Cartridge wide open to setting #6 by holding the top of the unit and turning the bottom counterclockwise until #6 appears in the setting window.

The Mineral Cartridge must be placed every 4 months. For ease in remembering, mark you calendar with the Reminder Stickers included in the package with chemical cartridges or replace the SPA FROG Mineral Cartridges every time you drain and fill you spa (every 90 to 120 days).



Ozone Generator [optional]

An Ozone generator will supplement disinfectants and provide the following benefits:

- Kills bacteria and viruses
- Destroys matter which might discolor water
- Does not affect the pH level of the water
- Has no "chemical" smell
- Automatic and requires little or no maintenance
- REDUCES the need for disinfectants. Does NOT eliminate the need.

Refer to your ozone generator owner's manual for information on service and maintenance.

Drain the Water

Under normal usage, you should change the water in your spa every 3-4 months. Before doing so be sure to turn off all power to the spa, then follow these easy steps to drain the spa:



CAUTION: Do not allow the pump to run without water. Running the pump without water will cause pump damage and void the warranty.



1. Pull the spout out (approximately 2") leaving the exterior end cap on.



2. Twist the end cap counterclockwise to remove it.



3. Attach hose to end of threaded spout. Twist the spout clockwise to the ON position to begin draining the water.

Once the tub has been drained, rotate the spout to the OFF position and replace the end cap. Push the spout back into the drain recess to complete the procedure. The remaining water in the spa can be scooped or siphoned out and you are now ready to clean the acrylic surface. Note: It is recommended that you not drain water onto grass or vegetation since chemicals in the spa water may damage them.



NOTE: Chemically treated water may damage plants. Place the garden hose in a safe discharge area.

NOTE: Some water will be left in the bottom of the spa and in your plumbing lines. This small amount of water can be mixed with fresh water without consequence. If 100% draining is required, a small submersible pump or a wet/dry shop vacuum should be used. Always call your dealer for assistance.

Cleaning the Spa Shell

Use a nonabrasive household cleaner to clean all spa shell surfaces and fixtures. Do not use scouring cleansers or solvents; damage to the acrylic finish will result.

Your Emerald Spa is manufactured using continuous-cast cross-linked acrylic sheet. This material provides a strong chemical-resistant high gloss surface that is hard, nonporous, and impermeable to water.

Given proper care, the polished, lustrous surface of the sheet will retain its appearance for many years. To clean your spa, be sure to use a soft absorbent cloth with any of the commercially available nonabrasive foam or liquid agents in general cleaning concentrations. Always rinse thoroughly with clean water and a soft chamois or moist cellulose sponge.

Cleaning agents containing strong abrasives such as scouring powders or strong solvents such as gasoline, acetone, or denatured alcohol should not be used to clean the acrylic surface of your spa.

Fine scratches may be minimized by the use of a mild automobile cleaner-polish. The cleaner-polish has a fine abrasive action, and its wax content tends to fill small scratches to make them less visible.



NOTE: Do not use scouring cleansers or solvents; damage to the acrylic finish will result.

NOTE: Do not use strong solvents such as gasoline, acetone, or denatured alcohol; damage to the acrylic finish will result.

Relamping the Underwater Light

The underwater light should be relamped from the under side of the spa as follows:

- 1. Disconnect the power to the spa.
- 2. Remove cabinet panel directly behind the light fixture.
- 3. Remove the old bulb and replace with a new bulb.

Winterizing Your Spa

Please see your local dealer for assistance on winterization.




NOTE: Damage caused by improper winterization will NOT be covered under warranty.

The Spa Cabinet

Durabilt[™] Synthetic Cabinet

Your Durabilt Synthetic Cabinet is made completely of a synthetic material. To clean, take a dampened rag with mild dish soap and wash the outside panels.



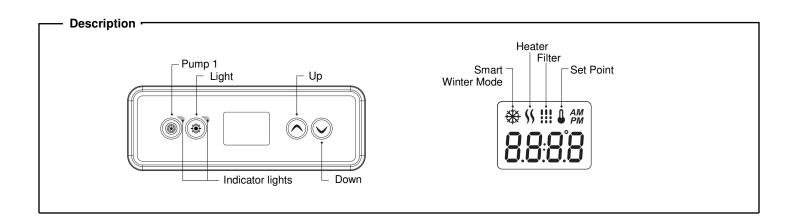

Spa Functions

Spa Side Control for Chateau Series



Off Mode

Pressing Pump 1 for 5 seconds will enable the Off Mode. This mode allows you to stop all outputs including automatic functions such as filter cycle, heat requests and Smart Winter Mode for 30 minutes to perform quick spa maintenance. When Off Mode is active, the display will toggle between the "OFF" message, the clock and the water temperature. The spa light will flash for a few seconds before the end of the 30 minutes to warn you that the system is about to resume its normal operation. Press Pump 1 to restart the system before the expiration of the 30 minute delay. When the system resumes its normal operation, the display shows "ON" for 3 seconds.



Pump 1

Press **Pump 1** key to turn Pump 1 on at low speed. Press a second time to turn pump to high speed. A third time turns pump off. A built-in timer automatically turns pump off after 20 minutes, unless pump has been manually deactivated first.

The "Pump 1" indicator lights up when Pump 1 is on. The indicator will flash when Pump 1 is on at low speed.



Light Key

Press **Light** key to turn light on. A second press turns light off. A built-in timer automatically turns light off after 2 hours, unless it has been manually deactivated first.

The "Light" indicator lights up when light is on.



Up/Down keys

Use **Up** or **Down** key to set desired water temperature. The temperature setting will be displayed for 2 seconds to confirm your new selection.

The "Set Point" icon indicates that the display shows the desired temperature, NOT the current water temperature!

Programming Steps



Program menu

The Program menu is accessible by holding down the Light key for 5 seconds. In the program menu, the following parameters can be set: clock, the filter cycles, economy mode and temperature units. While you are in the program menu, use the Up or Down key to adjust the parameters and use the Light key to jump to the next parameter. The changes will be saved after the confirmation of the last parameter only. If there is no action taken for 10 seconds, the system will exit the program menu without saving any changes.



Setting filter cycle frequency

The display will show **FFxx**, "**xx**" representing the number of cycles per day. Use the **Up** or **Down** key to adjust the frequency. Use the **Light** key to jump to the next parameter, economy mode (**EP**).

The "Filter Cycle" indicator lights up when filter is on, and flashes when suspended.



Setting temp units

Water temperature can be displayed in either Fahrenheit (°F) or Celsius (°C). The display will show F or C.

Use the **Up** or **Down** key to change the setting, Use the **Light** key to save all the parameters.



Setting the clock

Enter the program menu by holding down the **Light** key for 5 seconds. The display will show the current clock setting with the hour flashing.

Setting the hour: Use the Up or Down keys to adjust the hours. Press the Light key to jump to the next parameter, the minutes.

Setting the minutes: Use the Up or Down keys to adjust the minutes. Press the Light key to jump to the next parameter, the filter start time (FS).



Setting filter cycle start time

The display will show **FSxx**, "**xx**" representing the starting hour of the cycle. Use the **Up** or **Down** key to adjust the hours. Use the **Light** key to jump to the next parameter, filter duration (**Fd**).



Setting filter cycle duration

The display will show Fdxx, "xx" representing the duration in hours of the filter cycle. Use the Up or Down key to adjust the duration. Use the Light key to jump to the next parameter, filter frequency (FF).

0 = no filtration 24 = continuous filtration

It is not recommended to set this to "0".



Setting economy start time

The display will show **ESxx**, "**xx**" representing the hour at which the economy mode will become active. Use the **Up** or **Down** key to adjust the hour. Use the **Light** key to jump to the next parameter, economy duration (**Ed**).

When the Economy Mode is ON, the display will toggle between the "Eco" message, the time, and the water temperature.



Setting economy duration

The display will show **Edxx**, "**xx**" representing the duration in hours of the economy mode. Use the **Up** or **Down** key to adjust the hour. Use the **Light** key to jump to the next parameter, temperature unit.

24 = continuous economy

Water temperature regulation

Every 15 to 90 minutes the pump will run to ensure accurate water temperature readings as well as avoid heater activation in dry conditions. After verifying pump activation and taking a water temperature reading if required, the system automatically turns the heater on to reach and maintain water temperature at set point.

Indicator flashes when taking water temperature reading.



Setting Economy Mode

This mode allows you to lower the temperature set point of the spa by 20° F (11[°] C) during a certain period of the day.

The display will show **EPx**, "**x**" representing the state of the programmed economy (0 = disabled, 1 = enabled). Use the arrow keys to enable or disable Economy Mode. Use the **Light** key to jump to the next parameter, economy start time (**ES**).



Smart Winter Mode


The Smart Winter Mode protects your system from the cold by turning the pump on several times a day to prevent water from freezing in pipes.

The "SWM" indicator lights up when freezing is detected and flashes when the purge is active.

Cooldown

After heating the spa water to the desired set point, the heater is turned off, but the pump remains on for a period of time to ensure adequate cooling of the heating element, prolonging its useful life.



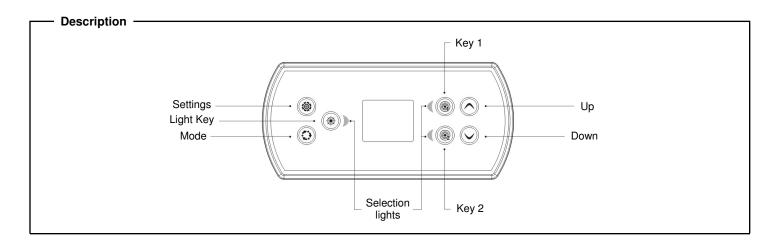



Power

Spa Side Control for

Estate Series

Press any button to turn the keypad on. After 30 minutes without activity it will shut off.

Main screen

The main screen gives you access to your accessories and water temperature. At the bottom of the screen you will see any error or maintenance messages that are present.

Start or stop accessories

To start or stop an accessory, press the associated button. Icons will become animated when their accessory is turned on, and inanimate when turned off. Icons on the screen will reflect the speed or state of the devices running on your spa.

When an accessory has more than two states, press the button until it reaches the desired state.

Water temperature

The temperature shown at the top of the screen gives the actual water temperature.

Use the Up and Down buttons to set the desired temperature. The set point will appear in blue at the bottom. After 3 seconds without any change to the set temperature value, the keypad will resume the normal display of messages.

Settings





Settings

From the home page you can access the Settings, where you will find:

Water care Audio (if installed) Day & time Keypad Config* Restore* About

Use the arrow keys to move up and down in the list. To select an option, press the lit button beside it (Light button).

At any point you can press the Settings button to return to the home screen.

*Reserved for qualified electricians & installers

Water Care

The Water Care section will help you set up your ideal filtration and heating settings. Choose a mode depending on your need.

Use the Light key to choose your setting. A checkmark will appear on the selected icon to confirm.

In Energy Savings mode, the set point will be reduced by 20° F*, which means that the heating system will not be engaged unless the temperature falls to 20° F below the spa's set temperature.

*Default value

Water Care Modes

Away:

In this mode the spa will always be in economy; the set point will be reduced by 20° F and filtration will be reduced.

Beginner:

The spa will never be in Economy Mode, and will run a normal 8 hours of filtration a day.



Energy Savings:

The spa will be in economy mode during the peak hours of the day and resume normal mode on the weekend.

Super Energy:

The spa will always be in economy mode during peak hours, every day of the week.

Weekender:

The spa will be in economy from Monday to Friday, and will run normally on the weekend.





Modifying Schedules

Use the arrow keys to scroll through the Water Care selections. To see and/or modify a Water Care category, use the lit button to the right (key 1) to open the selected Water Care menu.

Use the arrow keys to choose a schedule to modify (choice of economy and filtration schedules). Use the Light key to move between parameters.



You have several possibilities for the schedule (Mon-Fri, weekend, every day, or single days). The schedules will be repeated every week. The time and duration are set in 30 minute increments. Once you have set the schedule, use key 1 to go back. Ensure that you have selected the desired Water Care option in the main Water Care menu.



Audio

The Audio section in the Settings menu gives you the option to disconnect or unpair your Bluetooth enabled device.

The Mode key (audio access) is only present / functional when the spa is equipped with an optional audio package.

Settings continued







Day and Time

Here you can adjust the time format, and change the day and time. Use the arrows to choose the setting that you want to adjust, and select it by pressing the Light key. Use the arrow buttons to change the parameters, and the Light key to move between parameters.

Key 1 will take you back to the main Settings menu.

Keypad Settings

In this section you can change the temperature unit and language. Use the arrow keys, and move to the setting that you would like to change. Use the Light key to choose, and then the arrow keys to modify.

About

This section shows information about the keypad software number, and the revision numbers of the different components of your system.

Audio Operation ·



Audio Operation

Press the Mode key to access your stereo.


<u>Play / Pause audio</u> Press the Play / Pause button to start or pause the audio.

Adjusting the volume Press the Up or Down key to increase or decrease the volume.

<u>Changing tracks</u> Use the Last Track and Next Track keys to change tracks

Disconnect or Unpair Bluetooth These options can be found under the Audio section in the Settings menu.



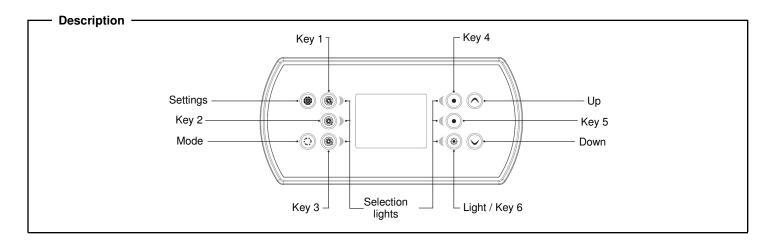

Main Functions -

Spa Side Control for

Manor Series



Power

Press any button to turn the keypad on. After 30 minutes without activity it will shut off.

Main screen

The main screen gives you access to your accessories and water temperature. At the bottom of the screen you will see any error or maintenance messages that are present.



Start or stop accessories

To start or stop an accessory, press the associated button. Icons will become animated when their accessory is turned on, and inanimate when turned off. Icons on the screen will reflect the speed or state of the devices running on your spa.

When an accessory has more than two states, press the button until it reaches the desired state.



Water temperature

The temperature shown at the bottom of the screen gives the actual water temperature.

Use the Up and Down buttons to set the desired temperature. The set point will appear in blue at the bottom. After 3 seconds without any change to the set temperature value, the current water temperature will reappear.

Settings



Settings

From the home page you can access the Settings, where you will find:

Water care Audio (if installed) Date & time Keypad settings Electrical configuration* About

Use the arrow keys to move up and down in the list. To select an option, press the lit button beside it (Key 2).

At any point you can press the Settings button to return to the home screen.

*Reserved for qualified electricians & installers



Water Care

The Water Care section will help you set up your ideal filtration and heating settings. Choose a mode depending on your need.

Use Key 2 to choose your setting. A checkmark will appear on the selected icon to confirm.

In Energy Savings mode, the set point will be reduced by 20° F*, which means that the heating system will not be engaged unless the temperature falls to 20° F below the spa's set temperature.

*Default value

Water Care Modes

Away:

In this mode the spa will always be in economy; the set point will be reduced by 20º F and filtration will be reduced.

Beginner:

The spa will never be in Economy Mode, and will run a normal 8 hours of filtration a dav.

Energy Savings:

The spa will be in economy mode during the peak hours of the day and resume normal mode on the weekend.

Super Energy:

The spa will always be in economy mode during peak hours, every day of the week.

Weekender:

The spa will be in economy from Monday to Friday, and will run normally on the weekend.





Modifying Schedules

To modify a Water Care category, use the lit button to the right (Key 5) to open the selected Water Care menu.

You can add schedules by scrolling down to Add, and selecting with Key 2.

To delete a schedule, press the lit button next to the garbage can icon on the top right of the screen.

You can modify the programmed schedules by selecting one and adjusting the schedule using the arrow keys. Use Key 2 to move between parameters.

You have several possibilities for the schedule (Mon-Fri, weekend, every day, or single days). The schedules will be repeated every week. The time and duration are set in 30 minute increments. Once you have set the schedule, use Key 1 to go back. Ensure that you selected the desired Water Care option in the main Water Care menu.

•	Date & Time	,	
Forma	it: AM	/PM	
Year:	20	2012	
Date:	Dec	10	
Time:	10: 36	РМ	

Date and time

Here you can adjust the time format, and change the year, date, and time. Use the arrows to choose the setting that you want to adjust, and select it by pressing Key 2. Use the arrow buttons to change the parameters, and Key 2 to move between parameters. Key 1 will take you back to the main Settings menu.



Keypad Settings

In this section you can change the temperature unit and language. Use the arrow keys, and move to the setting that you would like to change. Use Key 2 to choose, and then the arrow keys to modify.







Settings continued





Electrical Configuration

Please do not make changes in this section unless you are a qualified electrician.

In this section you can change the lowlevel configuration, number of phases, and input current. Use the arrow keys to scroll between selections, Key 2 to choose and move between parameters.

Once you have reached the Number of Phases in the menu, you cannot use the arrow keys to go back up to the low-level configuration. Please go back and re-enter the Electrical Config menu.

About

This section shows information about the keypad software number, and the revision numbers of the different components of your system.

Audio Operation



Audio

The Audio section in the Settings menu gives you the option to disconnect or unpair your Bluetooth enabled device.

The Mode key (audio access) is only present / functional when the spa is equipped an optional stereo package.

Audio Operation

Press the Mode key to access your stereo.

<u>Play / Pause audio</u> Press the Play / Pause button to start or pause the audio.

Adjusting the volume Press the Up or Down key to increase or decrease the volume.

<u>Changing tracks</u> Use the Last Track and Next Track keys to change tracks

Disconnect or Unpair Bluetooth These options can be found under the Audio section in the Settings menu. If you are using a device with Bluetooth technology, it must be connected for functions to work.

Please note that the Play / Pause and Change Track functions apply to devices using Bluetooth technology only, and will not work when AUX is selected as the source.

TROUBLE SHOOTING / SPA SIDE CONTROL ERROR CODES

<u>MESSAGE</u>	<u>MEANING</u>	ACTION REQUIRED
Hr	An internal hardware error has been detected by the system.	Contact your dealer or service provider.
HL	The system has shut the heater down because the temperature at the heater has reached 119 $^{\circ}$ F (48 $^{\circ}$ C).	Do not enter the water! Remove the spa cover and allow the water to cool down, then shut the power off and power your spa up again to reset the system.
80H	Temperature inside the spa cabinet is too high, causing the internal temperature in the system to increase above normal limits.	Open spa cabinet panels and wait until error clears.
FLO	The system does not detect any water flow while the primary pump is running.	Check and open water valves. Check for water level. Clean filter. If the problem persists, call your dealer or service supplier.
Prr	A problem is detected with the temperature probe.	Contact your dealer or service supplier.
OH	The water temperature in the spa has reached $108 ^\circ$ F (42 $^\circ$ C).	Do not enter the water! Remove the spa cover and allow the water to cool down to a lower temperature. Call your dealer or service supplier if problem persists.
UPL	No low level configuration software has been installed into the system.	Contact your dealer or service supplier.

Periodically throughout each day, your spa will turn on (run) to circulate the water and check the water temperature -- this happens in addition to your set filtration cycle. If heat is needed, the spa will continue to run until the set temperature is reached. This cycle will continue to repeat itself throughout the day.

Warning! Shock Hazard! No User Serviceable Parts.

Do not attempt service of this control system. Contact your dealer or service organization for assistance. Follow all owner's manual power connection instructions. Installation must be performed by a licensed electrician and all grounding connections must be properly installed.

TROUBLESHOOTING

• Equipment Module Will Not Operate

- Make sure the spa control is plugged into the control system of the equipment module.
- Check the main circuit breaker panel. If the GFCI or circuit breaker has tripped, reset the breaker.
- If the circuit breaker trips repeatedly, contact your dealer.
- Turn the circuit breaker, or switch, supplying power to the equipment module OFF then ON.
- If breaker continues to trip, check with your electrician to be sure the proper amperage breaker was installed.

• Pump Will Run But There Is No Water Flow

- Make sure all valves are in the open position.
- Make sure the filter is clean.
- Make sure the suction intake covers are free of debris.
- Make sure the water level of the spa is at least 2/3 of the way up the skimmer.
- Check to make sure all adjustable flow-type jets are turned open.

• Pump Runs And There Is Water Flow But No Heat

- Press the temperature set button to increase temperature. Do NOT expect to feel hot water coming from the jets.
- Make sure all valves are open to allow full water flow through the system. Limited water flow will NOT build enough pressure to allow the heater to come on.
- Clean the filter to assure maximum water flow.

• Pulsating Or Minimal Water Flow In High Speed Mode

- Be sure jets are turned open
- Make sure all valves are open.
- Make sure the filter element is clean.
- Make sure the suction intake covers are free of debris.

Ozone Bubbles Are Not Coming Out Of Ozone Jet

• Make sure the lever of the Diverter Valve (if equipped) is not in the center position.

• Pump Vibrates Excessively

- Check for loose screws on equipment module face and bolts attaching equipment module to frame.
- Make sure spa is not touching or rubbing against anything such as a deck rail, house, etc.
- Air may be trapped in pump housing. Turn pump off. Slightly loosen the pump unions. With a towel covering the area (water will splash) turn the pump on for 3-5 seconds to bleed air out of pump housing. Turn pump off and tighten the unions. Repeat if necessary.
- Make sure that the spa has been installed on a properly supported surface.

SPA WARRANTY INFORMATION

Emerald Spa Corporation, manufacturer of Emerald Spas ("Emerald") extends this Limited Warranty **solely** to the original consumer purchaser of any Emerald Spa manufactured in the U.S.A. or Canada after January 1, 2014.

LIFETIME STRUCTURAL WARRANTY

Emerald warrants (parts and labor) the spa shell against water loss due to defects in the spa shell for the "Lifetime" of the spa shell. For purposes hereof, a spa shell's "Lifetime" shall begin on the date of manufacture and shall terminate on the earlier to occur of (i) the discontinuation of the product line by Emerald, or (ii) ten (10) years from the date of purchase, or (iii) eleven (11) years from the date of manufacture. This warranty is subject to the limitations and disclaimers herein.

FIVE-YEAR SURFACE WARRANTY

Emerald warrants (parts and labor) the spa surface against cracks caused by defective materials or workmanship for a period not to exceed the lesser of five (5) years from the date of purchase or six (6) years from the date of manufacture. Excluded from this warranty are the cosmetic damages, surface blistering or conditions arising from abuse, misuse, normal wear or acts of God. This warranty is subject to the limitations and disclaimers herein.

THREE-YEAR COMPONENT WARRANTY

Emerald warrants (parts and labor) the mechanical equipment, plumbing, fittings, and controls against defects in workmanship for a period not to exceed the lesser of three (3) years from the date of purchase or four (4) years from the date of manufacture. Damage caused in whole or in part by improper electrical hook-up or wiring, or by any other cause listed as an exclusion to the warranties herein, voids the warranty. Travel, trip, or mileage costs are not covered under this warranty and service and travel charges may be assessed to the purchaser by the dealer.

EXTENT OF WARRANTY/DISCLAIMERS

These warranties extend <u>only</u> to the original "consumer" purchaser of the spa as that term is defined in the Magnuson-Moss Warranty Act, 15 USC Section 101, as amended. These warranties terminate upon: (1) transfer of ownership of the spa; (2) rental of the spa; (3) rental of the premises where the spa is located; or (4) commercial or public use of the spa. Warranty coverage shall not extend for any reason beyond the stated periods. *The warranties as set forth and limited herein are the sole and exclusive warranties made by Emerald and Emerald hereby expressly disclaims any other warranties, express or implied.* **EMERALD HEREBY EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE**. EMERALD'S LIABILITY WITH RESPECT TO ITS PRODUCTS SHALL NOT EXCEED THE OBLIGATION TO REPAIR OR REPLACE DEFECTIVE PRODUCT AS EXPRESSLY SET FORTH ABOVE IRRESPECTIVE OF THE THEORY UPON WHICH ANY CLAIM MIGHT BE BASED INCLUDING BREACH OF CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY. UNDER NO CIRCUMSTANCES SHALL EMERALD BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

WARRANTY PROCEDURES

In the event of any malfunction or defect covered by any of these warranties, contact the authorized dealer from whom you purchased your spa. All service work must be performed by an authorized dealer or an authorized agent of Emerald. In the event there is not an authorized dealer or repair firm in your area, the spa can be returned pre-paid freight (you pay) to Emerald for evaluation and, if necessary, repair of the defect. Emerald will then ship the spa back to you pre-paid (Emerald pays) upon completion of the repair. In the event the spa needs to be returned to Emerald for repair, contact Emerald in advance at: 4150 East Paris Avenue, Kentwood, Michigan, 49512, phone number: (800) 766.7727, for packaging and shipping instructions. In addition, Emerald reserves the right to inspect or designate a person to inspect any part that is claimed to be defective and covered by this warranty. For any warranty service of components, Emerald reserves the right to choose at its option repair of the problem or a replacement of the defective component. You are responsible to provide adequate access to the spa, equipment, and plumbing. Emerald, its dealers or agents will not perform service on spas where conditions are unclean, unsafe or potentially unhealthy due to abuse, neglect, or improper maintenance. With regard to spa surface warranty repairs, cracks will be repaired so as to prevent damage to or leakage from the spa shell. No warranty is made that the color or texture of the repair will match the original surface. Emerald reserves the right to substitute a part or component of equivalent value, either new or reconditioned, and any such repair or replacement shall assume as its warranty only the remaining portion of the warranty on the original product. Travel, trip, and mileage costs are not covered under these warranties and these charges may be assessed to you. Emerald dealers shall have the right to add additional surcharges for their services which are not covered by these warranties. Any party making a claim hereunder must establish by dated sales slip, invoice or installation receipt the date of original purchase and the fact that claimant is the original purchaser and that the spa is at the original installation location. Transportation costs incurred to and from Emerald for replacement spa, spa shell, plumbing, power pack or any part related to the spa are the responsibility of the purchaser. All costs for the removal and re-installation of the spa, spa shell or power pack are the responsibility of the purchaser.

ACTS INVALIDATING WARRANTIES

These warranties shall be null and void if the spa has been subject to alteration, misuse or abuse (or is used in manner that is not consistent with the product specifications or for which it is not designed) or if any repairs to the spa are attempted by anyone other than an authorized representative of Emerald. Alteration shall include but is not limited to any component or plumbing change, electrical conversion, or the addition of any non-approved sanitation or water purification device or heating system, which contributes to a component or unit failure, or unsafe operation of the system. **CORROSION OR DEGRADATION TO THE SPA SHELL, SURFACE, FITTINGS, STAINLESS ACCENTS, ELECTRONICS, PUMP AND ALL OTHER COMPONENTS THAT ARE CAUSED BY IMPROPER USE OF CHEMICALS AND/OR WATER TREATMENT ARE NOT COVERED UNDER THESE WARRANTIES. Damages caused by the following are not covered under these warranties: transportation or installation by third parties; operation of the spa at water temperatures outside the range of 50 degrees F. to 104 degrees F.; dirty, clogged or calcified filter cartridges; a defective support system (a solid, flat, level surface is required); harsh chemicals which are not recommended by the plastic manufacturer which come into contact with the spa surface; allowing undissolved spa sanitizing chemicals to come into contact with the spa surface; improper water chemistry maintenance; allowing the spa to remain uncovered in direct sunlight; freezing conditions; moving or relocating the spa; failure of an inadequate pad, platform, deck or other support structure; improper electrical hook-up or wiring; and acts of God or third parties or other damages caused to the spa which are outside the control of Emerald.**

LIMITATIONS OF LIABILITY/EXCLUSIONS

THESE WARRANTIES DO NOT APPLY TO PARTS WHICH ARE NOT MANUFACTURED BY EMERALD AND SHALL NOT APPLY TO ANY ITEMS INSTALLED IN OR ATTACHED TO THE SPA AFTER THE DATE OF MANUFACTURE OR TO OPTIONAL PARTS OR SYSTEMS WHICH ARE PURCHASED FOR INCLUSION ON OR IN THE SPA. EMERALD SHALL HAVE NO RESPONSIBILITY TO AID IN THE ENFORCEMENT OF ANY WARRANTIES AGAINST MANUFACTURERS OF SUCH ITEMS, PARTS, SYSTEMS OR OPTIONS. Optional Parts include, without limitation, ozone generator, all audio systems, and LED lighting. Emerald shall not be liable for loss of use of the spa or other incidental or consequential costs, expenses or damages, which include but are not limited to, water and/or sewage costs, water damage to surrounding areas, rooms or furnishings, the removal of or reinstallation of a wall, deck or other fixture, water leakage, costs of shipping or packaging, applicable taxes, or the payment of any costs or expenses of disassembly, removal, or reinstallation of the spa or any part. Pump shaft seal parts are warranted 2 years (unless otherwise excluded as described above) from initial start up of spa and labor is not included on such parts notwithstanding anything above to the contrary. The stainless steel escutcheon on the stainless steel jet option, fuses, light bulbs, spa pillows, spa cover, cover accessories and o-rings are not covered under these warranties. Under no circumstances shall Emerald or its representatives be held liable for injury to any person or damage to any property, however arising, even if caused by Emerald or its representatives' negligence. Some states do not allow limitation on how long an implied warranty lasts, and some states do not allow the exclusion or limitation of incidental or consequential damages, so these limitations or exclusions may not apply to you. These warranties give you specific legal rights, and you may also have other rights, which vary from state to state. No distributor, salesperson, dealer, retailer, or other representative of Emerald other than its President has the authority to alter or change these warranties, which changes must be in writing signed by such President. The warranties herein shall be in lieu of, and not in addition to, any other rights and remedies which might be otherwise available to purchaser.