

Replacement of SpaGlo Blue Light Assembly

This instruction outlines the procedure for installing the Caldera SpaGlo Blue Light Assembly, P/N 72509, used in the Caldera Paradise Series Spas.

Tools Required:

Safety Glasses

Large Phillips Screwdriver

Small Phillips Screwdriver

Kit Contents:

Blue Light Assembly – White, round pad with LEDs at one end and a Molex connector on the other.

Safety Requirements: *Safety Glasses must be worn at all time during this procedure.*

Refer to Figure 1

1. Disconnect power to the spa, access the equipment/pump compartment, and control box.
2. **In the Equipment Compartment**, locate the light reflector (for 2002-2005 spas) or light board (for 2006-current spas) at end of the LIGHT TUBE/LIGHT WALLFITTING (the length of the tube is 18"-30"). Turn it counter clockwise to remove. Unfasten the existing light assembly. This can be discarded. **For 2002-2005 spas**, thread the cable of the new light assembly through the reflector and ensure that the grooves line up. Reinstall the light reflector or light board into the LIGHT TUBE/LIGHT WALLFITTING. **For 2006-current spas**, install the light board directly into the LIGHT TUBE/LIGHT WALLFITTING.
3. **In the Control Box**, connect the 3-position Molex connector into the P-11 jack, LED SPA LIGHT.
4. Power up the spa and ensure that the light works properly by turning the power to the spa on and press the Light Control once to turn on the light.
5. Turn the power to the spa off and route all of the wire into the control box through the channels on the side of the box and close it up. Put the panels back on the spa. Power the spa back up.

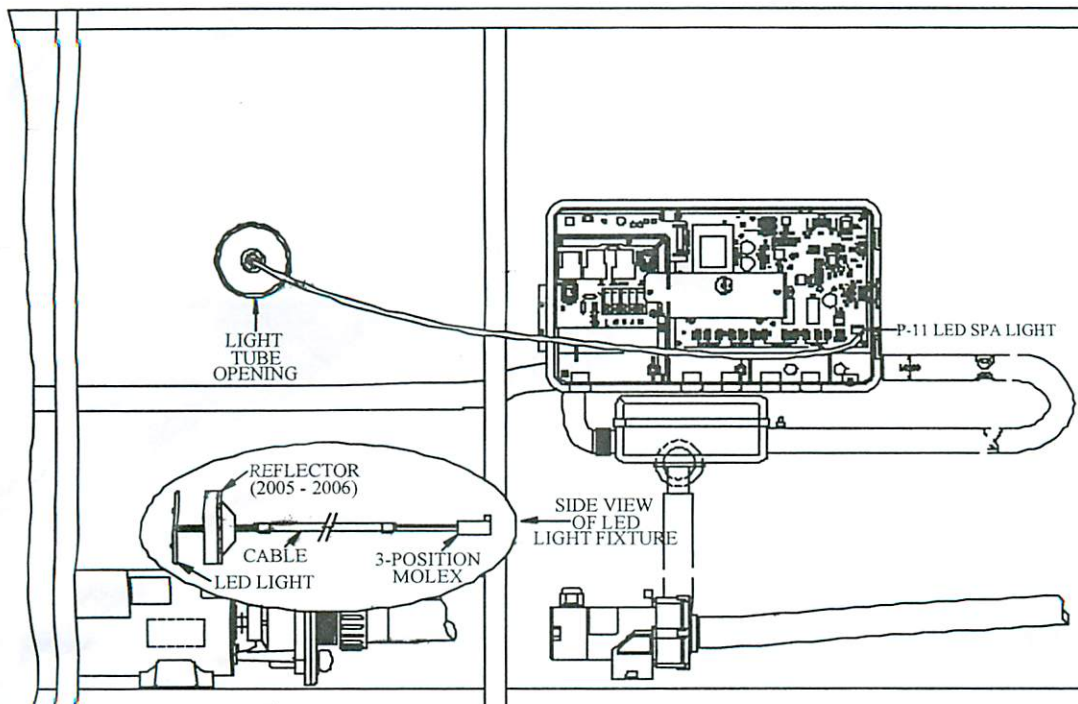


FIGURE 1